


TECNI BASIC Cable Trellis System Data Sheet Version 2023-1

The TECNI BASIC Cable Trellis System has been designed for rapid installation using basic tools. Parts are manufactured from Marine Grade Stainless for minimal maintenance.

Installation Instructions:

Tools Required: Hand or Power Drill, 5mm (7/32") Wood Drill Bit or a 10mm (3/8") Masonry Drill Bit, 7mm (9/32") Spanner, Marker Pen, Wire Rope Cutter.

1. Drill a 5mm (7/32") into wood or a 10mm (3/8") into masonry for the two end screw eyes.
2. Open the M5 Turnbuckle by holding the two ends & turning the centre section.
3. Form a loop in the 2mm diameter cable ensuring the cable passes through the eye of the M5 turnbuckle. Fit the Black PVC Cap supplied over the cut cable end to prevent fraying. Terminate using the supplied wire rope grips.
4. For 6-10 metre lengths pull the cable to the screw eye the other end and offer the cable up to the second turnbuckle to gauge the cut point in the cable. For lengths 1-5 metres, the cable will be threaded straight through the end eye at the other end to create a loop.
5. Mark the cut point in the cable & cut cable. Cut slightly over length & trim back rather than cut too short. Terminate using the supplied wire rope grips.
6. Ensure the cable is run through any intermediate supporting screw eyes - recommended maximum unsupported cable length is 1 metre (3 feet).
7. Ensure the M5 Turnbuckle/s are attached with hooks facing down.
8. Turn the centre section of the M5 turnbuckle/s to tension the cable.

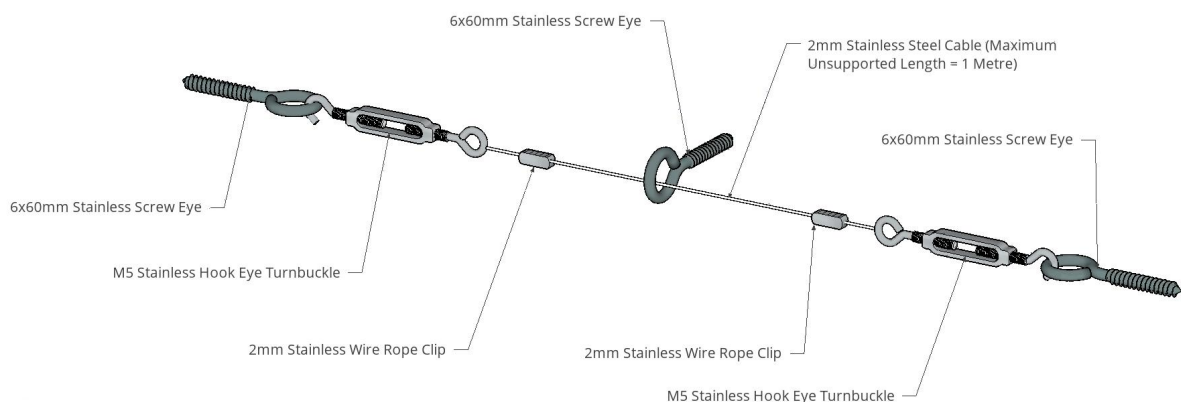

Installation Video Link:

[How to install TECNI Basic Trellis - perfect for supporting Climbing Plants](#)